


Wireless Karaoke Microphone

User Manual

Product overview

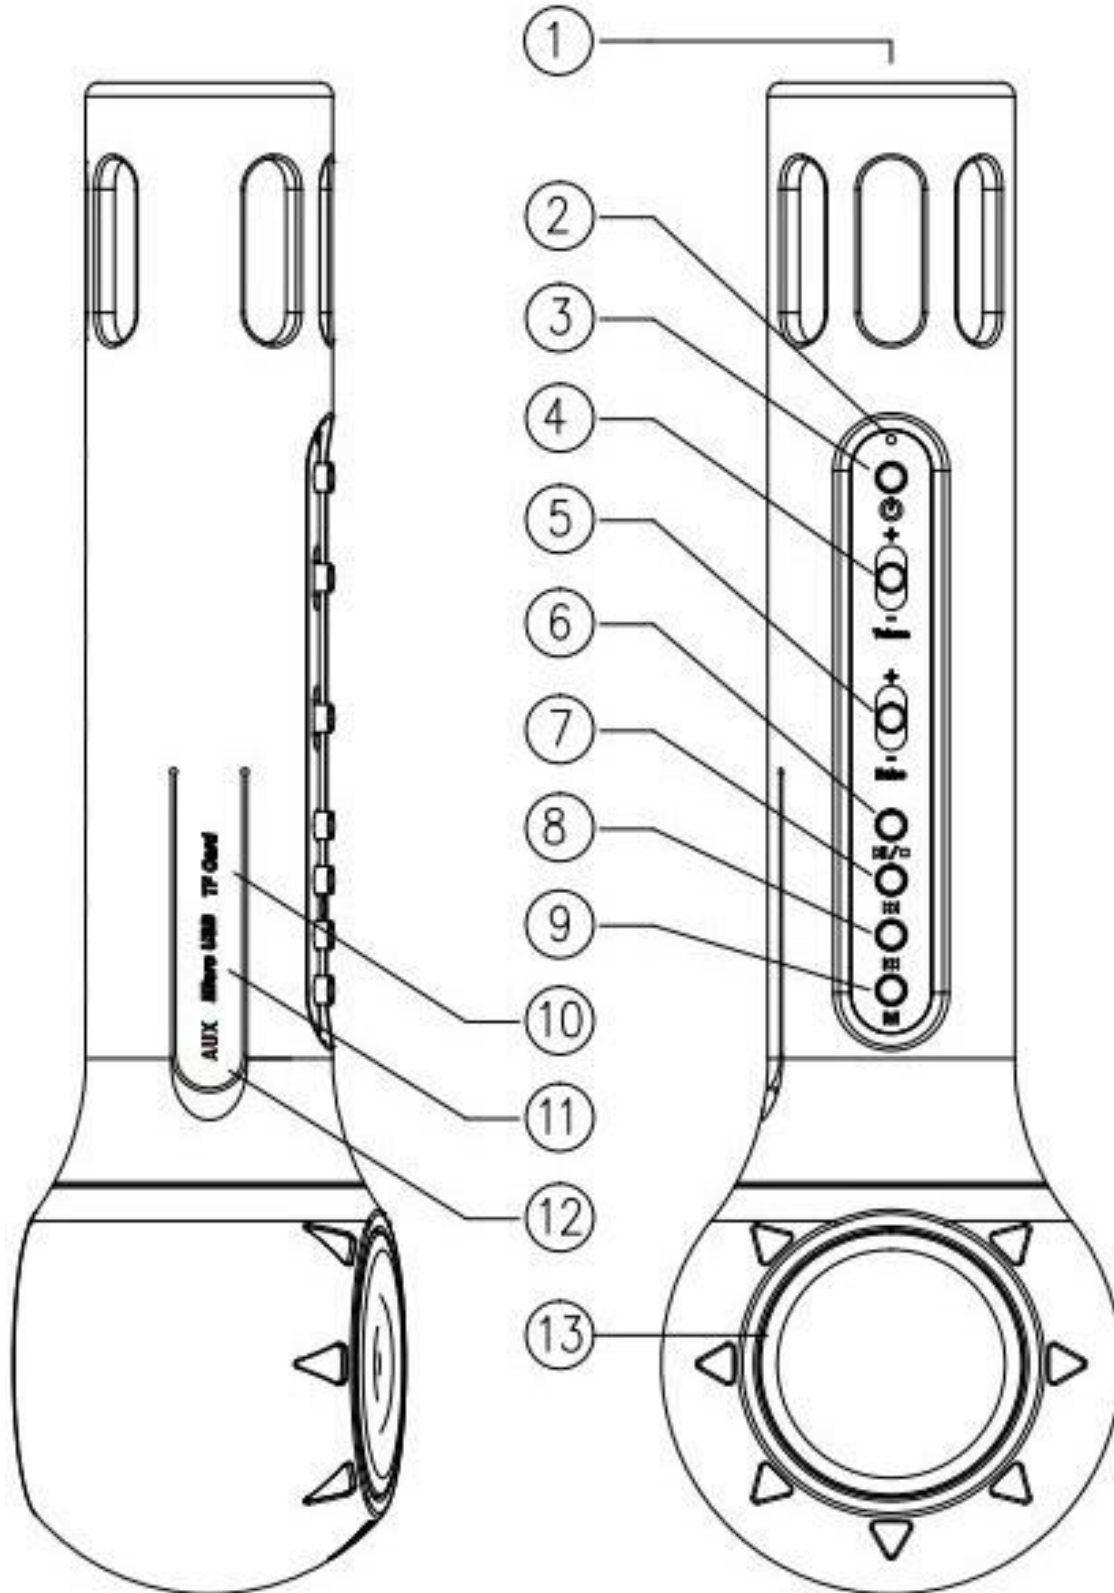

1. Microphone	Note: To achieve best sound quality it is important to hold the microphone close (max. 5cm) to your mouth.
2. Indicator	<p>*The blue working indicator light turns on when the unit powers on.</p> <p>*In Bluetooth mode, the blue working indicator blinks quickly. It remains illuminated after pairing successfully.</p> <p>*The blue working indicator blinks slowly when the unit is playing music. It remains on when paused.</p> <p>*The red charging indicator light remains on when the unit is being charged. Once it is fully charged, indicator light turns off.</p>
3. Power on/off	Long press the key for 2 seconds to turn on/off the microphone. The blue indicator light turns on when the unit powers on.
4. Volume control	Increase (+) or decrease (–) the volume of the MIC. If the control is set to Off (total to –) the microphone is muted.
5. Echo control	Set echo effect (+ more echo) / (– less echo)
6. Play/Pause	Short press to play or pause.
7. Back/Last track	Short press to go back to last track
8. Forward/Next track	Short press to move to next track
9. Mode button	Short press to transfer mode: Bluetooth , TF card/AUX
10. TF Card Connector	Insert TF card for music play
11. Micro USB Charging connector	Plug in provided charge cable to charge karaoke microphone
12. Aux Connector	Aux in port
13. Speaker	Music streams from speaker

Bluetooth Pairing Mode

Turn Microphone on. Turn your Bluetooth smart device on (eg smartphone). On your smart device go to Bluetooth settings. Search for “M05A”. Please choose Bluetooth pairing name “M05A” from the list of found devices. Check it is marked as connected. (If requested, the PIN code is “0000”). Select your music streaming platform on your smart device, and select song. Music streams after pairing successfully. User can sing along to music playing through karaoke speaker. Short press “▶/||” to play/pause music, short press “◀◀” to go back last track, short press “▶▶” to move to next track, short press “**M**” to change to other modes.

TF Card Mode

Turn on the Microphone and plug in TF card in the slot to begin streaming music. User can sing along to the music. Press the key “▶/||” to play/pause; press the key “◀◀” to go back to last track ; press the key “▶▶” to move on to next track, short press “**M**” to change to other modes.

AUX Mode

Plug one end of 3.5mm cable into AUX slot of the microphone and the other end into audio slot of Mobile Phone, Notebook, Tablet PC, MP3/MP4 Player etc. It will then enter AUX mode. After turning on music player, user can sing along to the music. Short press the key “▶/||” to play/pause, short press “**M**” to change to other modes.

Charging

Plug the charging cable into Micro USB slot of the microphone, USB slot of PC or other USB slot of chargers to enable charging of microphone. When the microphone is being charged, indicator light turns red. Once it is fully charged, indicator light turns off. (We’d suggest users turning off the microphone while charging. It takes a longer time to completely charge if the microphone is being used when being charged.)

Note:

1. If the microphone does not turn on after pressing the POWER key, or it spontaneously turns off once turned on, please check if unit is fully charged. If microphone is out of power, please charge and try again later.
2. Charge the microphone via DC 5V slot. The microphone may fail to work or be damaged if the microphone is not properly charged in recommended DC 5V slot.
3. Please do not increase the volume of your Mobile Phone, PC, MP3/MP4 Player, CD, DVD etc to a large extent, or sonic boom or sound distortion may occur. In case of sonic boom or sound distortion, please decrease volume either of Mobile Phone, PC, MP3/MP4 Player, CD, DVD or the microphone. The sound will return to normal.
4. If Bluetooth enabled device of Mobile Phone, PC etc fails to link to the Microphone or if it fails to play music after being connected, check if correct PIN code entered or if Bluetooth device of your Mobile Phone, PC etc supports A2DP.
5. If there is no voice or voice weak after powered on, check if "Volume control" is adjusted correctly on your Bluetooth device and the microphone. If not, please adjust up and try again.

Technical Information

Sound Track	Mono
Function	TF Card (Support 128M- 32G), AUX, Bluetooth
Bluetooth	4.2 V
Bluetooth transmission	≤10 metres
Power Supply	DC 5V, lithium battery
Battery	3.7V 1500MAH lithium battery
Output	3W
Frequency	100Hz-10KHz
Diameter of Loudspeaker	52mm
Speaker Impedance	4Ω
Charging connector	Micro USB charging connector
Anti-magnetic function	Available
Material	PC + ABS plastic+ Silicon