

iBright



M49
Roll Up Keyboard - 49 keys
User Manual

Thankyou for purchasing the M49 iBright Roll Up Keyboard. Please read manual prior to use and keep a copy for your records. We hope you enjoy using our products!

Specification:

- 49 standard keys
- Tutorial function
- 16 tones / 6 demo songs
- Volume button -/+
- Earphone/speaker interface
- Tone button (tone1, tone2)
- Black key higher than white key
- Record, play, start/stop function
- Automatic sleep within 3 minutes no play
- Power via USB/DC 5V (wall adapter not included) OR 3 x "AAA" batteries (not included)

In The Box:


- 1 x Roll-Up Soft keyboard 49 Keys
- 1 x Manual,
- 1 x USB 5V Cable

Safety Precautions

Read all instructions carefully prior to use. Check voltage marked on rating label matches your mains voltage. Do not disassemble or modify the product.

User Manual

Controller Function

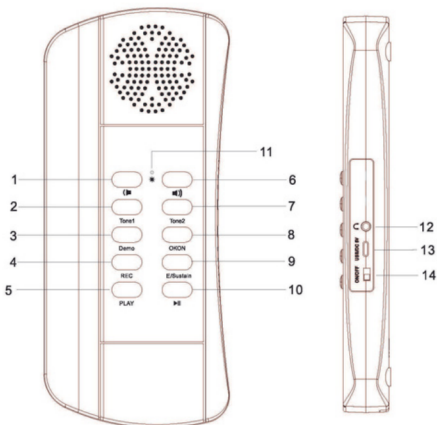



1		Volume control-	8	OKON	Tutorial button
2	Tone1	Tone button 1	9	E/Sustain	Echo/Sustain function
3	Demo	Demo button	10		Start/stop button
4	REC	Record button	11		LED indicator
5	PLAY	Play button	12		Earphone/speaker interface
6		Volume control+	13	USB/DC 5V	DC 5V power interface
7	Tone2	Tone button 2	14	ON/OFF	ON/OFF

User Manual

Function Description

1. Volume control

- Two buttons control the volume. Press  to increase volume. Press  to decrease volume.
- Volume level : 8 max. Default volume is 6.

2. Tone selection

- Total of 16 tones available. Default setting is Piano. Press tone 1 to select the 00-07 tones. Press tone 2 to select 08-15 tones.

Tone 1	Tone Name
00	Acoustic Grand Piano
01	Orchestral Harp
02	Church Organ
03	Tubular Bell
04	Electric Guitar (Jazz)
05	Violin
06	String Ensemble 1
07	Acoustic Guitar (Steel)

Tone 2	Tone Name
08	Trumpet
09	Tuba
10	Electric Bass
11	Alto Sax
12	Flute
13	Banjo
14	Oboe
15	French Horn

User Manual

Function Description cont'd..

3. Demo

Press "Demo" button. The demo songs begin to play. All demo songs will play automatically.

Press Demo button once, the demo plays. Press demo button a second time, the demo stops.

Demo Song names

- In the peach blossom palace
- Qinghai Tibet Plateau
- Xinyu
- Kanding Love Songs
- Dream Wedding
- For Alice

4. Record

You can record one song for playback using the REC button.

(i) Press "REC" button to enter record mode.

(ii) Press any key to begin to record. When it is full, notes will no longer record.

(iii) Press "Play" button to re-play your last recording.

(iv) To clear last recording, press "REC" button and keyboard will enter record mode again.

(v) When keyboard is turned off, REC resets to blank.

User Manual

Function Description cont'd..

5. Play

- Press Play button to replay recorded song.

6. Echo/Sustain

- Press "E/Sustain" button once to enter Echo effect.
- Press "E/Sustain" button again to enter sustain effect.
- Press "E/Sustain" button third time returns to original sound effect

7. Tutorial function

- Press "OKON" button to enter tutorial mode, then press a white piano key to select the different songs.
- When demo song finishes, press the white key to select next song.

8. Start/Stop

- To quit modes (Tutorial, record, play, demo and other modes), press "▶|| " .

User Manual

9. Care and storage instructions

- To avoid battery leakage remove batteries whilst not in use/in storage.
- To optimise all functions please lay keyboard flat whilst in use.
- Do not roll too tight after using, or the key function may be affected and the product lifetime will reduce.
- Do not pull or twist piano keyboard.
- Do not use/store piano in high temperature or wet environment.

10. TROUBLE SHOOTING TIPS

PROBLEM	SOLUTION
Piano does not turn on	Check power cord fully inserted into port OR change batteries if using.
Abnormal sound setting	Turn off. Restart. Restore original settings

User Manual



www.iBright.com.au



Join us on our socials @iBrightAu

iBright® Australia
Distributed by K2 Sales Pty Ltd. PO Box 696 Black Rock, VIC. 3193 Australia
e: Info@iBright.com.au