 


iBright

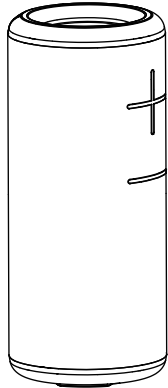

USER MANUAL ProGio Speaker M10

Please read the manual carefully before use, and store for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Keep the unit away from high temperature exposure. Do not place near naked flame or heat. Do not disassemble, modify or attempt to repair the unit.

Ventilation

Allow at least a 10 cm gap all around the product. Do not cover ventilation openings. (For example, newspapers, fabric etc.)

This appliance is intended for domestic household use only.

Symbol



This regulatory compliance mark shows that this product is in compliance with Australian Standard AS/NZS 4417.1 and AS/NZS 4417.2, and is safe to supply to the Australian market.

 
SPECIFICATIONS

DC input: 5 V \equiv 1000mA
Rechargeable battery: 7.4 V \equiv 1800mAh
Speaker power (RMS): 12 W x 2
Frequency range: 2.402GHz – 2.480GHz
Output power: < 20 dBm

Package Contents


- Rechargeable Speaker
- Micro USB Charge cable
- User guide

Product Description

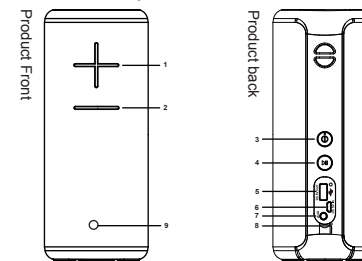

1. Press **+** Button for volume up, hold on for next song.
 2. Press **-** Button for volume down, hold on for previous song.
 3. Power on/off audio mode. Hold the button for power on/off, short press the button for mode select.
 4. Press for Play/Pause/Hold on to disconnect Bluetooth.
 5. USB play and charge out.
 6. USB charge in DC 5V/1000mA.
 7. AUX IN Jack.
 8. Charge LED indicator (Red LED indicates the unit is charging and not full. Red LED will turn off when fully charged.)
 9. LED Function Indicator (Located front of speaker)
- Bluetooth mode: Search Status - White LED quickly flashes
Successful pairing: White lights flash slowly
AUX in mode : White LED light stay on / USB play mode: White LED light flashes quickly twice and stops once / Mute: White light slowly flashes.

 Charging The Battery Product back

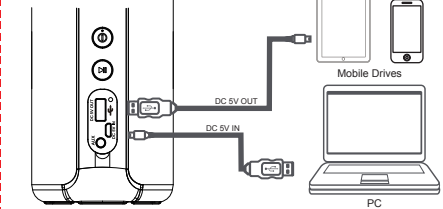

Charging in

1. Use the included USB Charge cable. Plug one end into the DC 5V jack located at the side of the unit. Plug the other end into a USB powered port or any other USB AC adapter (not included).
2. The battery is fully charged in 4 hours. Note: Charging time will be longer if playing music whilst charging.
3. The red LED light indicates the unit is charging. The red LED turns off when the battery is fully charged. You can disconnect the charge cable when charging is complete.

Charging OUT

1. Use your mobile device's original cable to connect to the "DC OUT 5V" jack on the side of unit .
2. "OUTPUT DC 5V " jack provides 5V/1000MA output. If your device receives higher output, the unit will shut off the USB port for your safety.

Please recharge the unit for a while to activate the USB port .

AUX Play Mode

1. Hold the **⏻** button to turn on the unit.
2. Plug one end of 3.5mm audio cable into the headphone or line-out jack of your device. Plug the other end of the cable into the AUX jack located on the side of the speaker. The speaker will go to Aux in mode automatically. White LED will stay on.
3. Adjust the volume of your audio device to the desired level.
4. Press the **+** or **-** Button on the speaker to adjust the volume.
5. Press **⏻** button at the same time to MUTE the volume.

Bluetooth Play Mode

If you are using a Bluetooth audio device, make sure the working distance is within 20 - 30 ft (10m). A different environment may affect the working distance.

1. Press and hold **⏻** button to turn ON the speaker. Speaker will make a beeping sound to indicate it is in Bluetooth mode. White LED will flash quickly.
 2. Turn on the Bluetooth on your audio device.
 3. Searching Devices Choose " M10 ". No password is required. If your device does require a password, type "0000"
 4. Adjust the volume on your audio device to the desired level.
 5. Press the **+** or **-** Button on the speaker to adjust the volume.
 6. Hold the **+** or **-** Button on the speaker to adjust to Previous/Next song
 - 7: Press **⏻** Button at the same time to pause/play music.
- NOTE :** The speaker will power off automatically after 30mins if you don't operate device or play music.

USB Play Mode

1. Hold the **⏻** button to turn on the speaker.
2. Plug your USB to the USB port on the side of the speaker. The speaker will enter USB play mode automatically .
3. Press the **+** or **-** Button on the speaker to change the speaker volume.
4. Hold the **+** or **-** Button on the unit to change to Previous/Next song
5. Press the **⏻** Button to pause/play music.

TWS Stereo pairing function

1. Turn on both iBright speakers. Pair one unit with your device.
2. Quickly press the **⏻** button twice to enter stereo pairing mode. The white LED will flash quickly.
3. When both units are paired, one speaker displays the white LED light on. The second speaker white LED light flashes .
4. Searching devices choose " M10 " .
5. Play the music from your device and both speakers will provide you with stereo sound

Light Control :

Hold the **⏻** " Button to turn speaker on. Press the **⏻** button to change to different light mode . Connect via Bluetooth wireless technology, plug SD card or Aux play for full light mode effect.

TROUBLESHOOTING

Problem	What to do
No power	Ensure your speaker is turned on and is completely charged.
No sound	<ul style="list-style-type: none">• Ensure the volume of your speaker is not at the minimum setting.• Ensure the connected audio device is playing audio.
Sound is distorted.	Turn down the volume of the speaker or the connected device.
Cannot pair the speaker with my Bluetooth device	<ul style="list-style-type: none">• Ensure the Bluetooth mode of your device is turned on.• Your Bluetooth device may be out of range. Try moving it closer to the speaker.• Move your Bluetooth device and/or the speaker away from other devices that generate electromagnetic interference, such as phones, microwave oven, wireless network routers, or other Bluetooth devices.

IPX7 Rating

The speaker can be submerged in 1 metre of water for up to 30 minutes*.

*NOTE:

- (i) Avoid water which may be corrosive.
- (ii) Avoid high pressure water.
- (iii) Ensure the silicone cover on the side of the speaker is fully closed before placing in water. It must be 100% sealed.
- (iv) All the accessories are not waterproof. Only use the accessories (ie. Charge cable) in a dry environment, away from water.



To prevent the possibility of the battery leaking, over-heating, fire, please observe the following cautions

Warnings

- 1: Please use included USB charge cable in the package to charge speaker.
- 2: Please disconnect charge cable after unit fully charged. Do not charge the speaker for extended/lengthy time after fully charged.
3. If electrostatic discharge occurs, this product may malfunction and need to restart or reset for recovery.
4. The product should be stored at room temperature and charged to about 30% to 50% of capacity. If not in use for extended amount of time, we recommend fully charging the unit every few months to maintain batteries.



Safe Disposal: Do not dispose electronic waste into household rubbish. Check your local council website for e-waste recycling or disposal in your area.

Distributed by K2 Sales Pty Ltd. PO Box 696 Black Rock, Vic. Australia 3193

www.iBright.com.au | Join Us on our Socials @iBrightAu