

iBright Party Speaker with Trolley

Model: FW-1841B

 


Instruction manual



READ THIS INSTRUCTION MANUAL BEFORE OPERATING THE APPLIANCE AND SAVE IT FOR FUTURE REFERENCE.

Safety Precautions

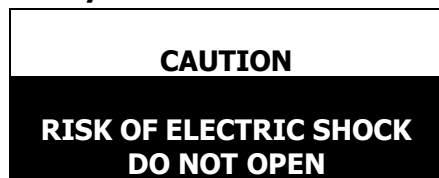

The purpose of these precautions is to ensure user safety and prevent property damage. Be sure to read and observe all safety precautions.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of un-insulated "dangerous voltage" enclosed within the product that may be of sufficient magnitude to constitute a risk of electric shock to the person using the device.



The exclamation mark within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the instruction manual accompanying the appliance.

Safety Instructions

- 1) Read this Instruction Manual before you attempt to connect or operate the appliance.
- 2) Save this Instruction Manual for future reference.
- 3) The appliance shall not be exposed to dripping or splashing and no objects filled with liquids, shall be placed on the appliance. Dry location use only.
- 4) No naked flame source, should be placed on or near the appliance.
- 5) Children should be supervised when using the appliance.
- 6) Please use this appliance in moderate climates.
- 7) Ventilation should not be impeded by covering the ventilation openings.
- 8) Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- 9) Check that the voltage indicated on the data plate of the mains adaptor corresponds with that of the local network before connecting the appliance to the mains power supply.
- 10) The AC mains plug is used as the power disconnect device and it should remain readily accessible and operable during intended use. In order to completely disconnect the appliance from power, the mains plug should be completely removed from the AC outlet socket.
- 11) Do not plug/ unplug the power plug into/from an electrical outlet with wet hands.
- 12) If the power plug does not fit into your outlet, do not force the plug into an electrical socket.
- 13) Only use accessories, which are specified by the manufacturer.
- 14) Use replacement parts, which are specified by the manufacturer.
- 15) Install the unit in accordance with the manufacturer's instructions.
- 16) Place the unit where there is good ventilation. Place the unit on a flat, hard and stable surface. Do not expose to temperatures above 40°C. Allow at least 10 cm clearance from the rear and the top of the unit and 5 cm from each side.
- 17) Dispose of used batteries as recommended by your local council.
- 18) Always ensure that the appliance is unplugged from the electrical outlet before moving or cleaning. Clean with dry cloth only.
- 19) Unplug the product during lightning, storms or when it will not be used for long periods of time.

- 20) This appliance has no user-serviceable parts. Do not attempt to repair this appliance yourself. Only qualified service personnel should perform servicing. Take the appliance to the electronics repair shop of your choice for inspection and repair.
- 21) NEVER let anyone, especially children, push anything into holes, slots or any other openings in the unit's casing as this could result in a fatal electric shock.
- 22) Do not place the unit near TVs, speakers and other objects that generate strong magnetic fields.
- 23) This unit is for indoor and dry location use only.
- 24) Do not leave the unit unattended when it is in use.
- 25) The normal function of the appliance may be disturbed by strong Electro-Magnetic Interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in other location.

Getting Started

- Read this instruction manual carefully.
- Remove the equipment from the box.
- Remove the packaging and save it for future use (for example when moving the unit).

Features

- Bluetooth Connectivity
- Built-in lithium battery 11.1 V 2200mAH
- Line in jack (3.5mm aux in cable included)
- USB Port for playing MP3
- USB Port for charging (5V, 1A)
- RCA in jack
- LED display
- 6.3mm microphone jack input *2 (microphone not included)
- ECHO effect
- Remote control

Box Content

- Main Unit *1
- Power cord
- Line in cable with 3.5mm to 3.5mm plug *1
- Remote Control*1
- Instruction Manual*1

Power supply

1. Using power cord

- Place the main unit on a flat and stable surface.
- Connect the detachable AC cord (included) to the AC socket on the back panel of the unit.
- Plug the power cord into 100-240V ~50/60Hz AC outlet.

2. Using the built-in lithium-ion battery

The unit has a 11.1V 2200mAH built-in rechargeable lithium-ion battery. Charge the built-in battery before using it for the first time. The charging indicator will turn light red and will turn off after fully charged.

Warnings:

- Recharge the built-in battery, the environmental temperature should be 41°F to 95°F (5°C to 35°C)
- To get the longest service life of the built-in battery, charge at indoor-temperature.
- The built-in battery in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above 100°C(212°F) or incinerate.

Caution: Risk of fire or explosion if the battery is replaced by an incorrect type.

Using the Remote Control to Operate the Unit

- Aim the remote control directly at the remote control sensor (IR) on the left side of front panel.
- Don't put any objects between the remote control and the system while operating the unit.
- If the remote control does not work properly, please check the batteries.

Installing Batteries of the remote control

 
- (i) Push the tab on the battery compartment in the direction of the arrow as shown below.
- (ii) Slide out the battery compartment to reveal the battery.



CAUTION: 

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Do not ingest the battery. Chemical Burn Hazard
- This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

 
Description of the top panel

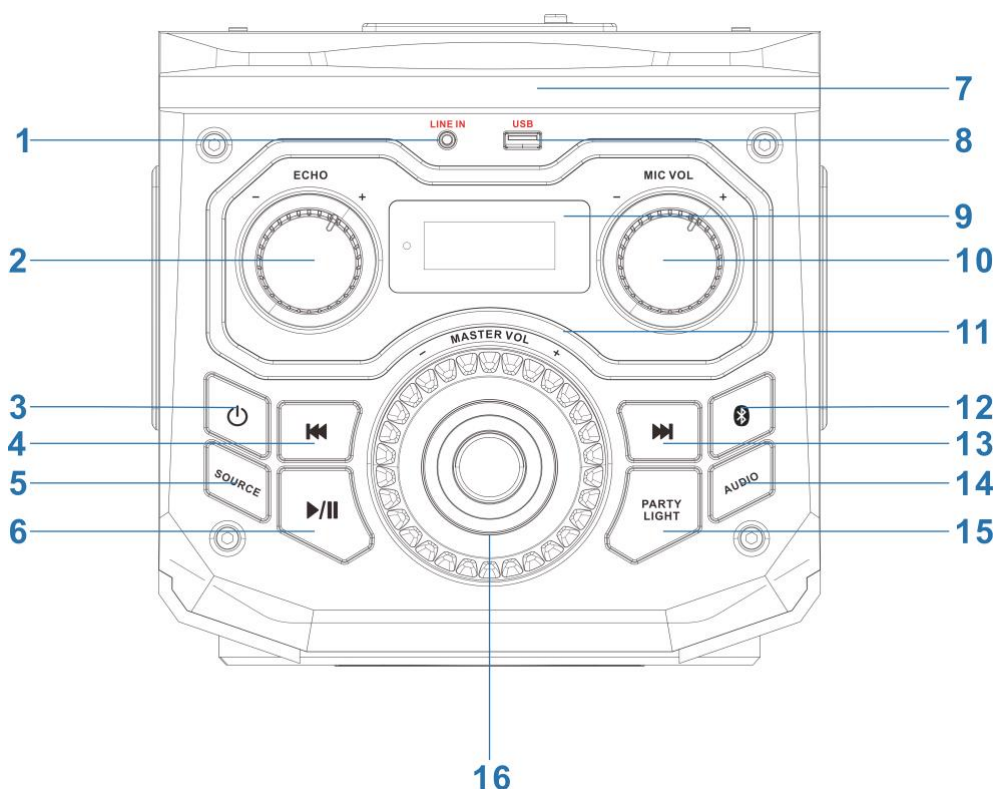

No	Description
1.	3.5mm Line in jack
2.	ECHO Rotary Knob
3.	Power Button
4.	Skip Backward: Press to skip to previous track
5.	Source Button: Short press to select function mode: Bluetooth, AUX-1, AUX-2, USB.
6.	Play/Pause: Press to play/pause the music
7.	Cradle
8.	USB port for MP3 playback
9.	LED display
10.	Microphone Volume Rotary Knob: Anti-clockwise to decrease the volume, clockwise to increase the Microphone volume
11.	Panel LED Party Light
12.	Bluetooth button
13.	Skip Forward : Press to skip to next track
14.	Audio button: To adjust bass/ treble
15.	Party Light Mode Button: Change the Speaker
16.	Volume Rotary Knob: Anti-clockwise to decrease the volume, clockwise to increase the volume

 
Description of Rear panel

No	Description
1.	USB Charging Port (5V 1A)
2.	6.3mm Microphone Jack 1
3.	6.3mm Microphone Jack 2
4.	RCA out Jack-Right
5.	RCA out Jack-Left
6.	AC Cord

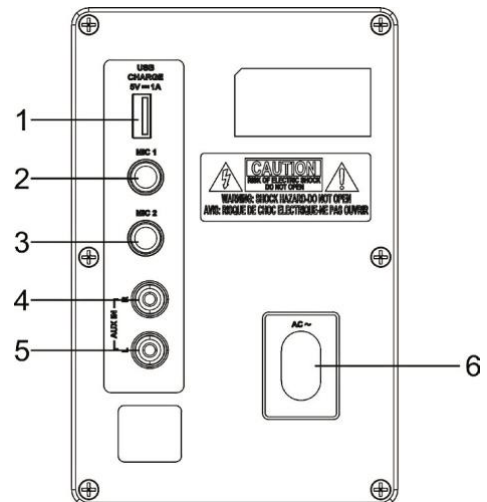



Description of Remote control

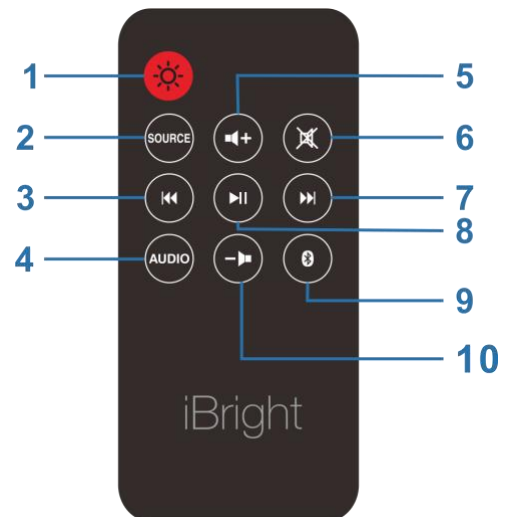No	Description
1.	Lighting Mode
2.	SOURCE: Bluetooth, AUX-1, AUX-2, USB.
3.	To skip backward
4.	To adjust bass/ treble
5.	To increase master volume
6.	To mute or restore sound
7.	To skip forward
8.	To play/pause
9.	Bluetooth pairing / Disconnect Bluetooth connection
10.	To decrease master volume



Turning on/off the unit

- Press  button on the unit to turn on the unit.
- Press  button on the unit to turn off the unit.

Selecting function

When the unit is ON, press SOURCE button on the unit or remote control to select the mode between USB, BT, AUX1, and AUX2 functions.


Pairing a Bluetooth device

- When the unit is ON, press SOURCE button on the unit or remote control repeatedly to select Bluetooth mode. The display will show "BT" and start to blink rapidly.
- On the Bluetooth device, enable Bluetooth and select **"FW-1841B"** from the Device List (Refer to the user manual of the device to be connected for detailed operations.) If the



Bluetooth device prompts for a pass code, use "0000". Some Bluetooth devices will ask you to accept the connection. You will hear an indication voice when pairing is successful.

Tip: If you want to connect your Bluetooth speaker to another Bluetooth device, you need to disconnect current device first and follow the steps above to make a new connection.

If the pairing fails, perform the following:

- Press and hold the  button until the indicator blinks quickly to enter the Pairing mode. On the Bluetooth device, enable Bluetooth function and select "**FW-1841B**" from the Device List (see step 2 above)
- On some devices such as computers, once paired you must select the unit from the Bluetooth menu and choose "Use as Audio Device(stereo)" or similar.
- Pairing remains intact when the unit and/or your Bluetooth device is taken out of communication range. An active connection will be re-established when your Bluetooth device returns within range.
- When the unit is turned on again, it will automatically try to reconnect with the most recently paired Bluetooth device.

USB playback

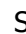- Connect USB device to the USB MP3 port on the unit.
- Press **SOURCE** button on the unit or remote control repeatedly to select USB mode. The display will show "**USB**" for a few seconds and playback will start automatically.
- Select desired track with  or  on the unit or the remote control.

Notes:

- The total number of MP3 files on the USB device should not exceed 999.
- The device may not contain more than 99 directories.
- The reading time takes a few seconds or more depending on the amount of MP3 files and folders on USB device.
- Do not put anything other than a USB device to the port of this unit. Other objects may damage the USB mechanism.
- The USB socket must not be connected to the computer directly, as it may damage the unit.
- There are many USB devices in the market. We cannot guarantee to support all different models. Please try another USB device if your device is not supported.

3.5mm Aux in jack

- Connect your auxiliary source (e.g. mp3 player) to the Aux in jack on the top of unit (cable included).
- Press **SOURCE** button repeatedly to select **Aux1** mode. The display will show "**AUX1**" for a few seconds.
- Start playback from your auxiliary source.
- Adjust the volume to desired level.
- To stop playback, disconnect your auxiliary source from the Aux in jack.

RCA in jacks

- Connect your auxiliary source (e.g. mp3 player) to the **AUDIO IN L/R** jack on the back panel of the unit (cable not included).
- Press **SOURCE** button repeatedly to select **Aux2** mode. The display will show "**AUX2**" for a few seconds.
- Start playback from your auxiliary source.
- Adjust the volume to desired level.
- To stop playback, disconnect your auxiliary source from the **AUDIO IN L/R** jack.

Treble and bass adjustment

- Press Audio button repeatedly until B00 shows on the display, rotate the master volume knob to adjust the level of the bass effect from B-3, B-2,B-1, B00,B01,B02 to B03.
- Press Audio button repeatedly until t00 shows on the display, rotate the master volume knob to adjust the level of the treble effect from t-3, t-2, t-1, t00, t01, t02 to t03.

USB CHARGING

- This unit is equipped with a built-in USB charging port (output:5V, 1A) for recharging your mobile device.
- Simply plug the USB charging cable (not included) into the USB charging port and connect it to your mobile device.

Cleaning

Warning: Disconnect the unit from the mains supply before cleaning.

- Use a soft, dry, clean cloth. Regularly dust the vents at the back and sides.
- Using solvents, abrasive or alcohol-based products risks damaging the appliance.
- If an object or liquid enters inside the appliance, unplug it immediately and have it checked by an authorized engineer.

Trouble Shooting Guide

Should this unit exhibit a problem, check the following before seeking service:

Problem	Remedy
No Power	-Ensure the AC/DC power plug is connected to the wall socket outlet properly and that it has power. -If this does not help, leave the unit unplugged before seeking advice.
No sound can be heard	Check whether the volume is set in MUTE mode, then adjust the volume to desired level.
The sound is distorted	Check the volume setting on both the speaker and your device and adjust the volume to a suitable level.
Remote control No functions or short range.	-Insert new batteries. -Aim the remote directly towards the remote sensor.
The Bluetooth device does not pair or connect with the unit	-You have not activated the Bluetooth function of your device. Refer to the user manual of your device to activate Bluetooth function. -The unit is already connected with another Bluetooth device; disconnect that device and then try again.

Technical Information

Power	AC 100-240V~50/60Hz
Consumption	40W
Operation temperature	0°C to + 35°C
Speakers	1 x 6.5" speaker+ 1x 3" speaker
Speaker output	1x 30W=30W RMS
Line-in	3.5mm Aux jack and RCA in jack
Remote Control	CR2025 coin battery *1
Built-in battery	11.1V 2200mAH Lithium-ion battery
Bluetooth working distance	Up to 10 meters in open space
Unpacked Weight	~6.0Kgs
Dimensions (Approx.)	240*250*524mm
Bluetooth Frequency	2402-2480MHz
Max.RF emission power	1.69dBm

Disposal of the Old Device



This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose them in accordance to any applicable local laws of requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).